


# PKS001 GEN1

---


## INSTALLATION INSTRUCTIONS

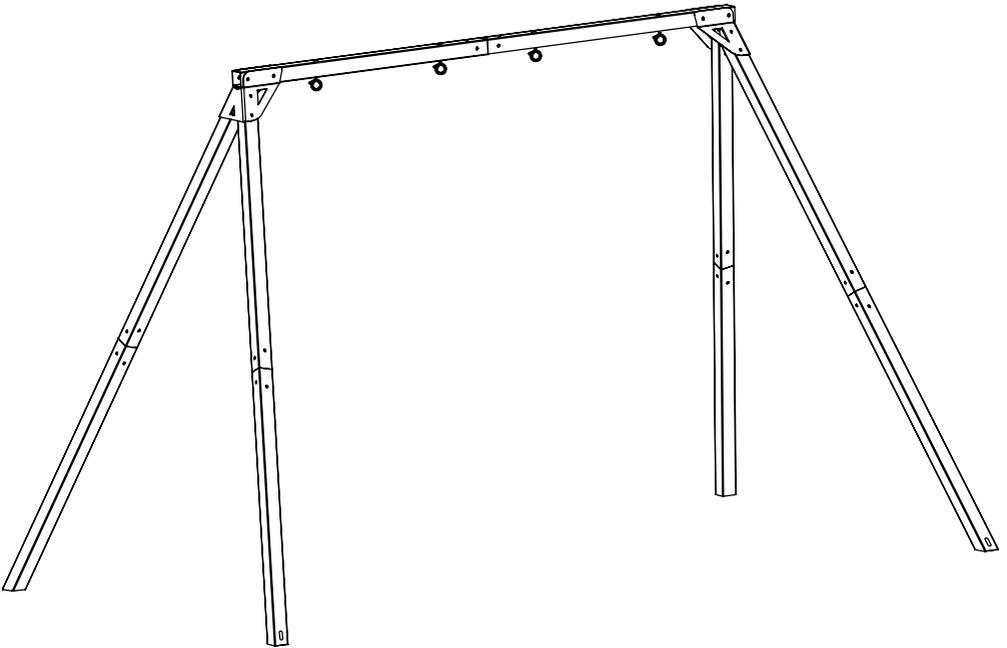

**KSPORT**

**WWW.K-SPORT-DE.DE**

17.07.2024 AW

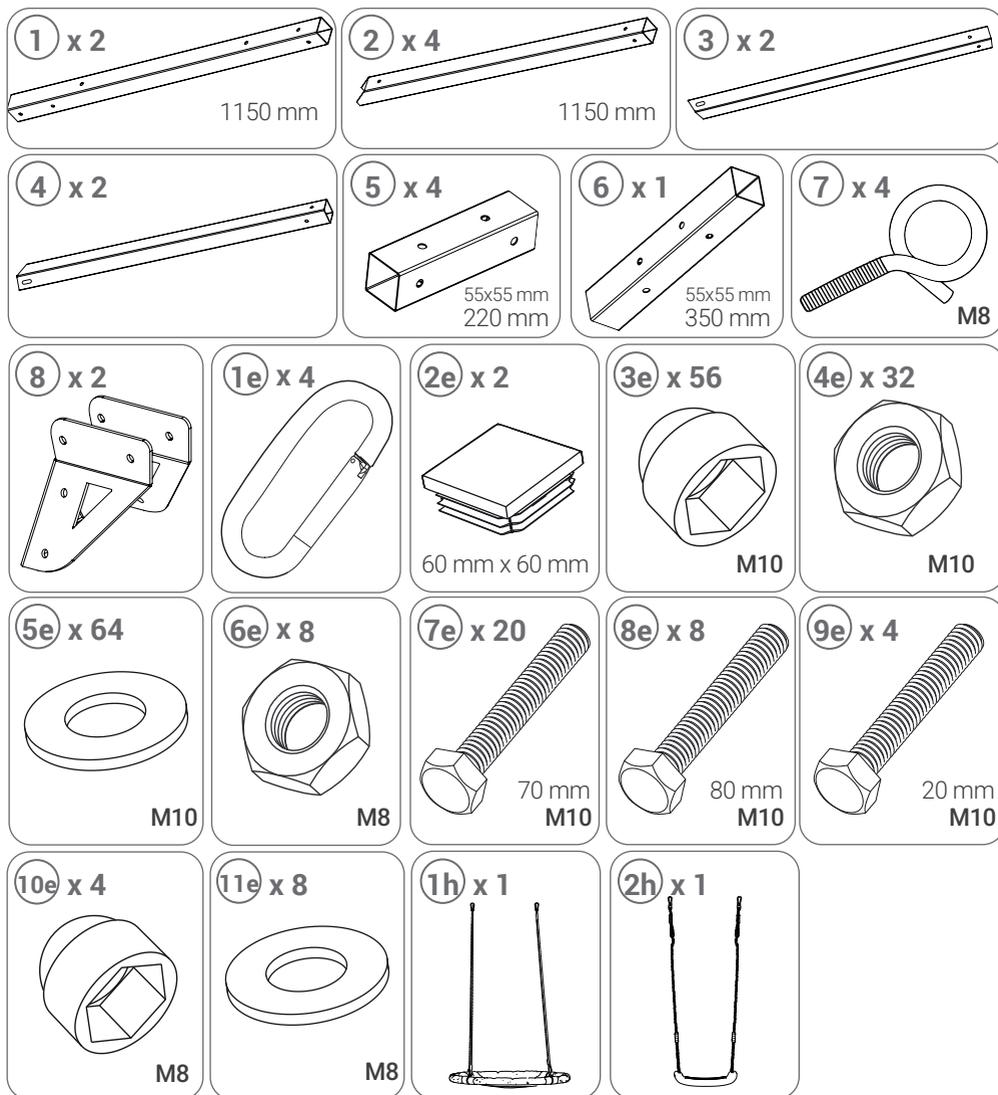

PL

Pamiętaj, aby w okresie jesienno/zimowym zabezpieczyć urządzenie przed śniegiem i wilgocią odpowiednim przykryciem, pokrowcem, lub przenieść je do suchego pomieszczenia. Producent nie bierze odpowiedzialności za szkody powstałe w skutek nieodpowiedniego zabezpieczenia urządzenia przed wilgocią.



ENG



Remember to protect your device from snow and moisture during the fall/winter season with an appropriate cover or case, or move it to a dry room. The manufacturer is not responsible for any damages caused by inadequate protection of the device from moisture.



DE




Denken Sie daran, die Schaukel in der Herbst-/Winterzeit mit einer geeigneten Abdeckung vor Schnee und Nässe zu schützen oder in einem trockenen Raum aufzubewahren. Der Hersteller haftet nicht für Schäden, die durch unsachgemäßen Schutz des Gerätes vor Feuchtigkeit entstehen.



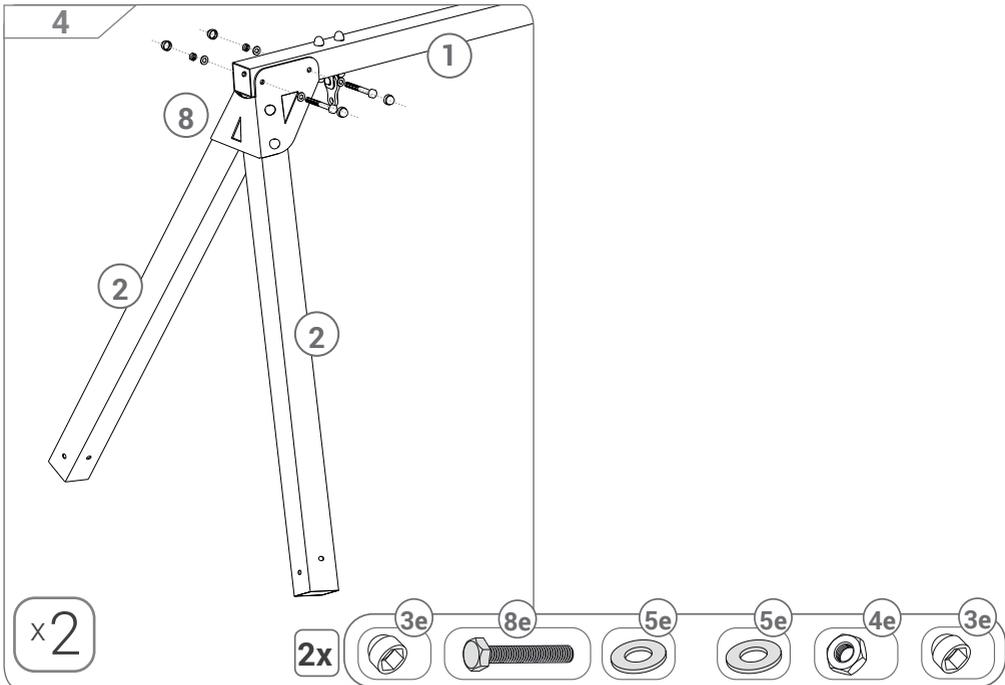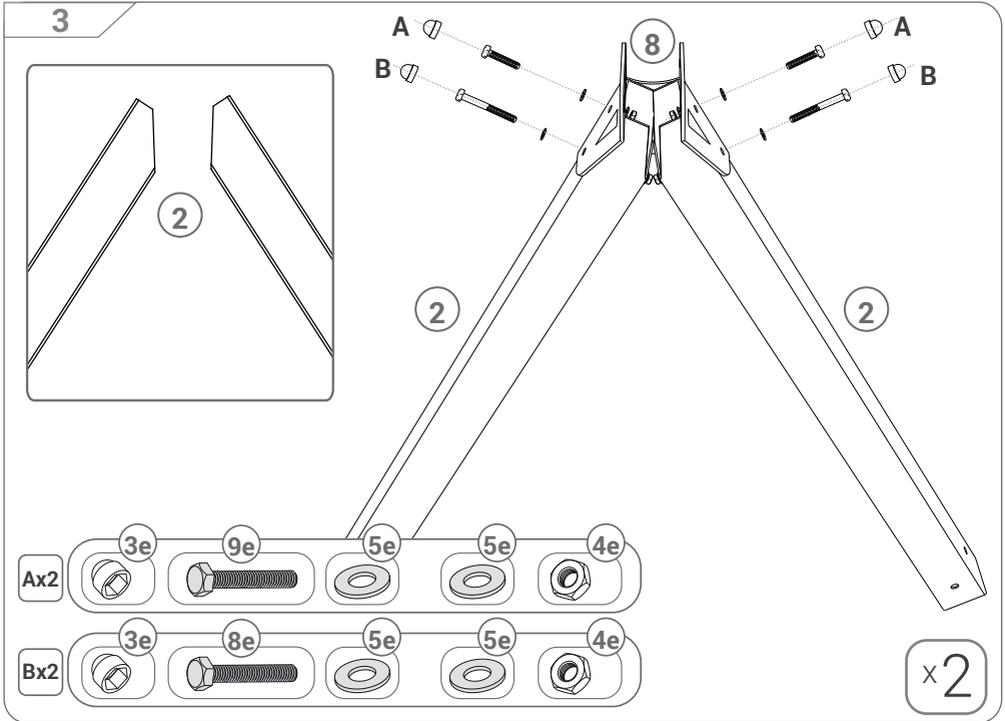

5

x8

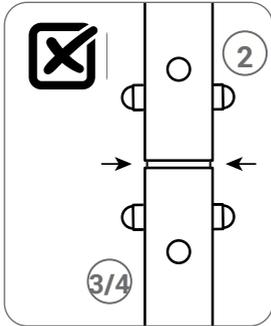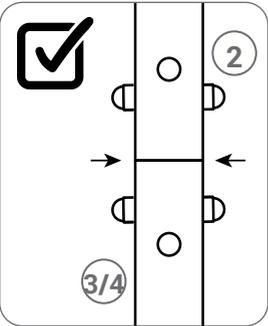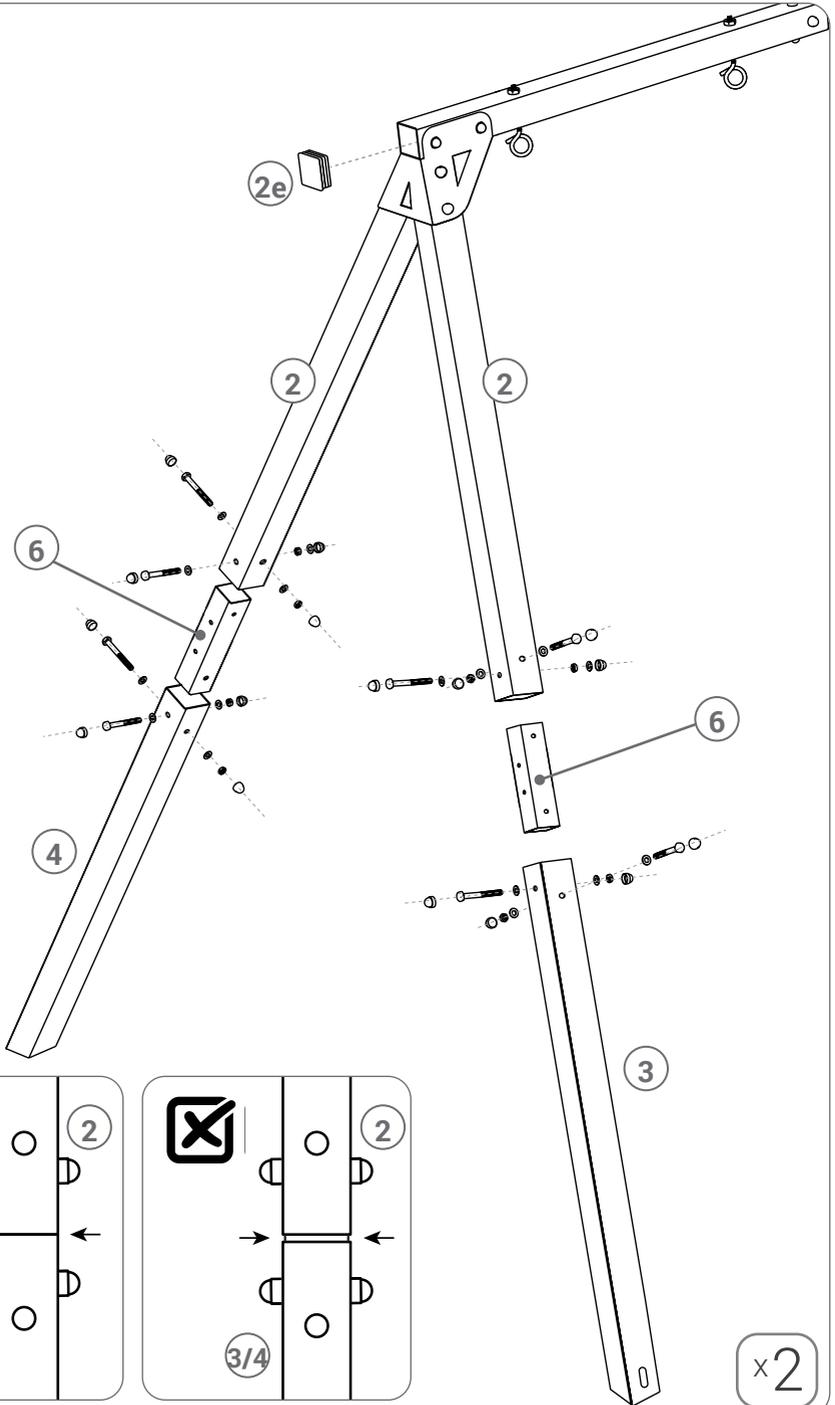

x2

6

**UWAGA! Nie używaj huśtawki bez jej odpowiedniego zakotwienia!**


Podczas kotwienia stelaża do podłoża, trzeba rozsunąć dolne nogi w zewnętrzną stronę (pokazane strzałkami) aby usztywnić konstrukcję.



**WARNING! Do not use the swing without properly anchoring it!**

When anchoring the frame to the ground, spread the lower legs outward (as shown by the arrows) to stabilize the structure.

**ACHTUNG! Benutzen Sie die Schaukel nicht, ohne sie richtig zu verankern!**

Beim Verankern des Gestells im Boden müssen die unteren Beine nach außen gespreizt werden (wie durch die Pfeile angezeigt), um die Konstruktion zu stabilisieren.

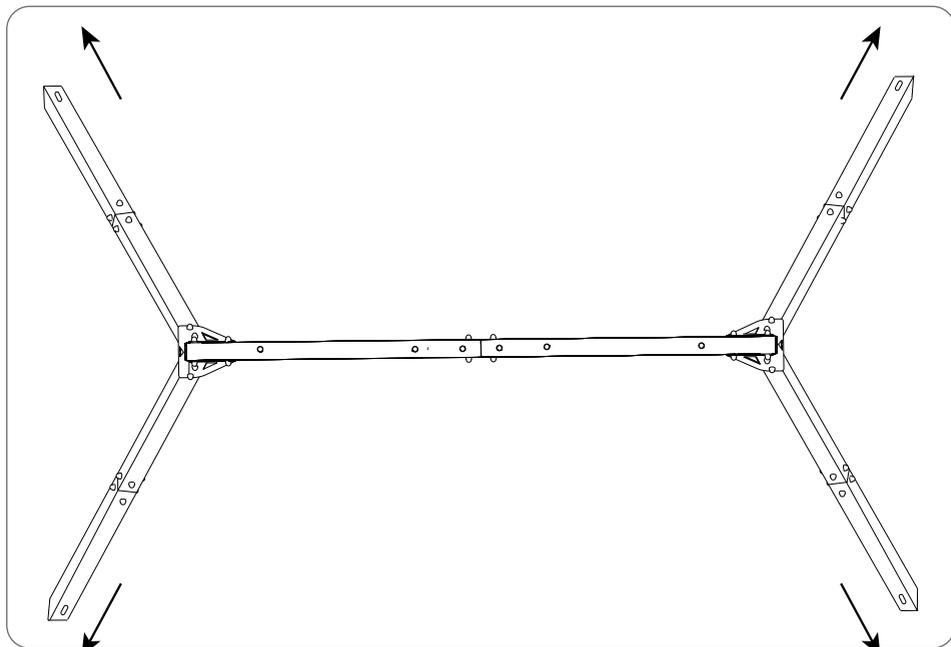

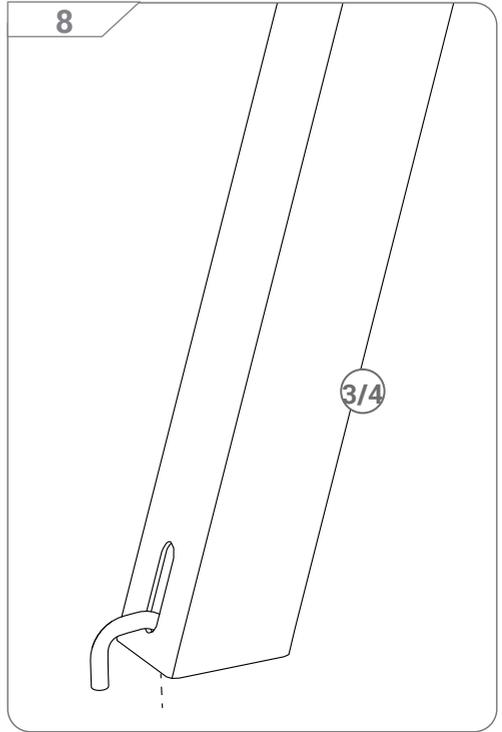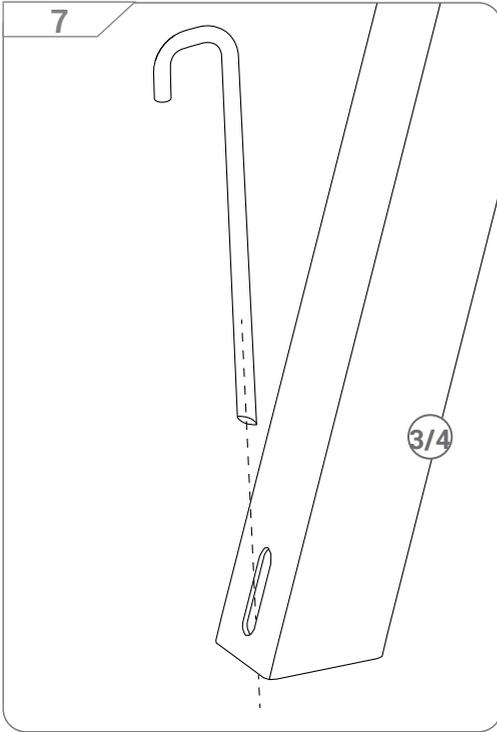

# SAFETY INFORMATION

**READ THE INSTRUCTION MANUAL CAREFULLY BEFORE USE AND FOLLOW THE INSTRUCTIONS FOR USE. keep the instructions for future use.**



## Warnings:

Caution! For domestic use only. Use for other purposes is prohibited.

Caution. Not suitable for children under three years of age.

Caution! Use toys only under adult supervision.

Caution! Danger of tipping or falling if not properly secured.

Caution! Keep all small parts and packaging materials out of the reach of babies and children, as there is a risk of suffocation.

The product must be installed under adult supervision. We are not liable for damage caused by improper use of the appliance or failure to follow the instructions. Incorrect installation can be dangerous. **MAINTENANCE INSTRUCTIONS:** The appliance should be cleaned with a soft, damp cloth. Do not use aggressive chemicals.

Ensure that the unit is installed on a safe surface and always place it on a smooth, flat and stable surface. There must be at least 0.6 m of free space around the unit to facilitate access to an escape route in the event of a fault or accident.

Before using the unit, check that it is working properly and tighten the fixing screws if necessary.

Check the attachment of ropes, main suspension parts in general, fixings, ground anchorage and other connecting elements. Consumable parts should be replaced when worn.

The appliance may only be used if it is in working order. If this is not the case, please contact the service department and discontinue use.

The appliance may only be used by children under adult supervision and at their own risk. Do not insert anything into the openings that are not specified in the instructions.

Be careful of all protruding parts and adjusting devices that may interfere with play. The unit must only be used for its intended purpose.

Carry the unit in a correct body posture to avoid injury. If necessary, ask a third party for assistance during transport.

The unit must be assembled according to the instructions. If the unit is incomplete, please contact the Technical and Sales Service at the following e-mail address: [info@k-sport-de.de](mailto:info@k-sport-de.de) and indicate the article number of the missing item.

If the unit cannot be assembled for technical reasons (e.g. there is no opening available, the opening is in a different place, the part is bent, etc.), please contact the Sales and Technical Support at the following e-mail address: [info@k-sport-de.de](mailto:info@k-sport-de.de).

## **Distribution/Service: Manufacturer:**

K-SPORT-DE.DE K-  
Sport GmbH Kiesweg  
18 35396 Gießen  
+(49)1515 729 14 56  
[info@k-sport-de.de](mailto:info@k-sport-de.de)

K-Sport PL  
K-SPORT.COM.PL  
Rzepiennik Biskupi, 214  
33-163 Rzepiennik  
Strzyżewski  
+(48) 731 400 995  
[biuro@k-sport.com.pl](mailto:biuro@k-sport.com.pl)

# INSTRUCTIONS FOR USE

## SAFETY

**Product for domestic use. READ THE INSTRUCTIONS FOR USE BEFORE USE. OBSERVE THE INSTRUCTIONS FOR USE:**

1. If the unit squeaks or makes strange noises, stop rocking.
2. There must be at least 0.6 m clearance around the unit to facilitate access to an escape route in the event of a breakdown or accident.
3. Before swinging, check the correct operation of the swing and tighten the fixing screws. Check the attachment of the ropes and other connecting elements. Consumable parts must be replaced when worn.
4. The swing may only be used if it is working properly. If this is not the case, contact the sales and service department and stop the swing.
5. The product is intended for children only. Children may use it under adult supervision and at their own risk.
6. Nothing other than what is specified in the instructions may be inserted into the openings.
7. Pay attention to all protruding parts and adjusting devices.
8. The swing may only be used as intended.
9. The swing is intended exclusively for domestic use. Use for other purposes is prohibited.
10. Transport the unit in a correct body position to avoid injury. If necessary, ask a third party to assist you with transport.
11. The unit must be assembled according to the instructions. If the unit is incomplete, please contact Sales and Technical Support at the following e-mail address: info@k-sport-de.de and indicate the article number of the missing item.
12. If the unit cannot be assembled for technical reasons (e.g. there is no opening available, the opening is in a different place, the part is bent, etc.), please contact the Sales and Technical Support Service at the following e-mail address: info@k-sport-de.de and attach a photo of the defective part.
13. Remember to protect the swing from snow and moisture with a suitable cover during the autumn/winter season or store it in a dry place. The manufacturer is not liable for damage caused by inadequate protection of the device against moisture.

**CAUTION:** We do not accept any liability for damage caused by improper use of the appliance or failure to follow the instructions.

**MAINTENANCE INSTRUCTIONS:** The appliance should be cleaned with a soft, damp cloth. Do not use aggressive chemicals.  
Protect from moisture and corrosion.

**Distribution/Service: Manufacturer:**

K-Sport GmbH	K-Sport Polska
K-SPORT-DE.DE	K-SPORT.COM.PL
Kiesweg 18	Rzepiennik Biskupi, 214
35396 Gießen	33-163 Rzepiennik Strzyżewski
Deutschland	Polska
(49) 151 57291456	(12) 2251622
info@k-sport-de.de	biuro@k-sport.com.pl